Product Manual - Bar Joist - Mezzanine

MZ01/AA, Typical Welded Connection

MZ02/AA, Typical Bolted Connection

MZ03/AA, Bar Joist to Beam Connection

MZ03A/AA, Bar Joist to Beam Connection

MZ04/AA, Bar Joist to Beam at Column Location

MZ04A/AA, Bar Joist to Beam at Column Location

MZ07/AA, Section at Deck Ends

MZ07B/AA, Pour Stop Detail at Full Height Column

MZ10/AA, Welded Horizontal Bridging Condition S

MZ10A/AA, Bolted Diagonal Bridging Condition S

MZ10B/AA, Bolted Horizontal Bridging Condition S

MZ11/AA, Welded Horizontal Bridging Termination Condition N

MZ11A/AA, Bolted Diagonal Bridging Termination Condition N

MZ11B/AA, Bolted Horizontal Bridging Termination Condition N

MZ12/AA, Welded Horizontal Bridging Termination at Wall System by Others Condition P

MZ12A/AA, Bolted Diagonal Bridging Termination at Wall System by Others Condition P

MZ12B/AA, Bolted Horizontal Bridging Termination Condition P

MZ13/AA, Welded Horizontal Bridging Termination Condition R

MZ13A/AA, Bolted Diagonal Bridging Termination Condition R

MZ13B/AA, Bolted Horizontal Bridging Termination Condition R

MZ20/AA, Joist Header Section

MZ21/AA, Mezzanine Joist Header Section

MZDB/AA, Mezzanine Diagonal X Bridging Reference Layout

MZHB/AA, Mezzanine Horizontal Bridging Refrence Layout


MZOHA/AA, Mezzanine Bridging Conditions



BAR JOISTS

A NUCOR COMPANY

Typical Welded Connection Bar Joist to Mezzanine Beam MZ01/AA

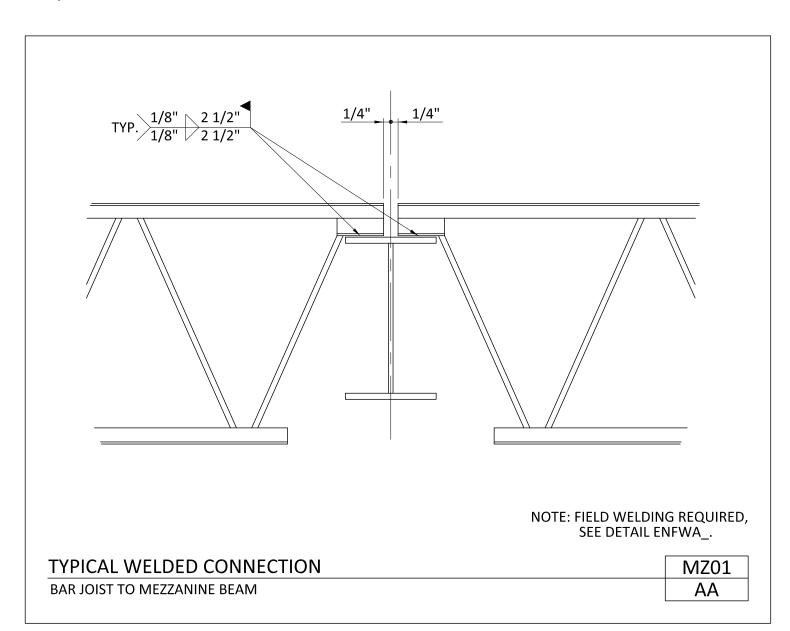


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Typical Bolted Connection Bar Joist to Mezzanine Beam MZ02/AA

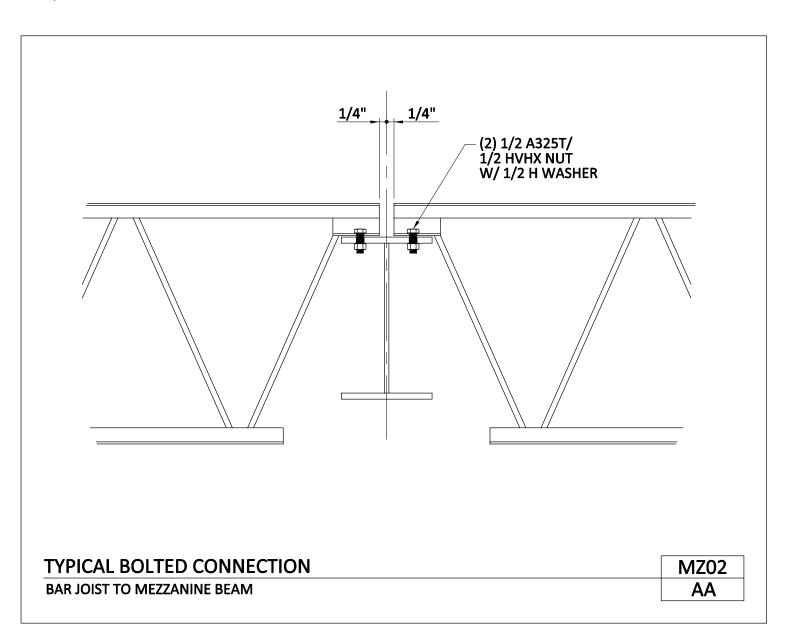


Download the DWG file by clicking here.



BAR JOISTS

Bar Joist to Beam Connection OSHA Near Column MZ03/AA

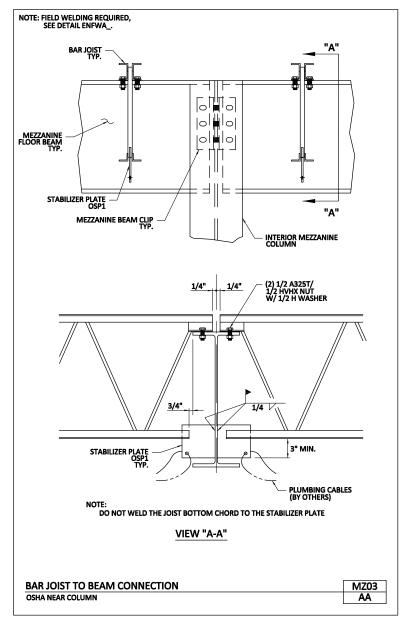


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bar Joist to Beam Connection OSHA Near Column MZ03A/AA

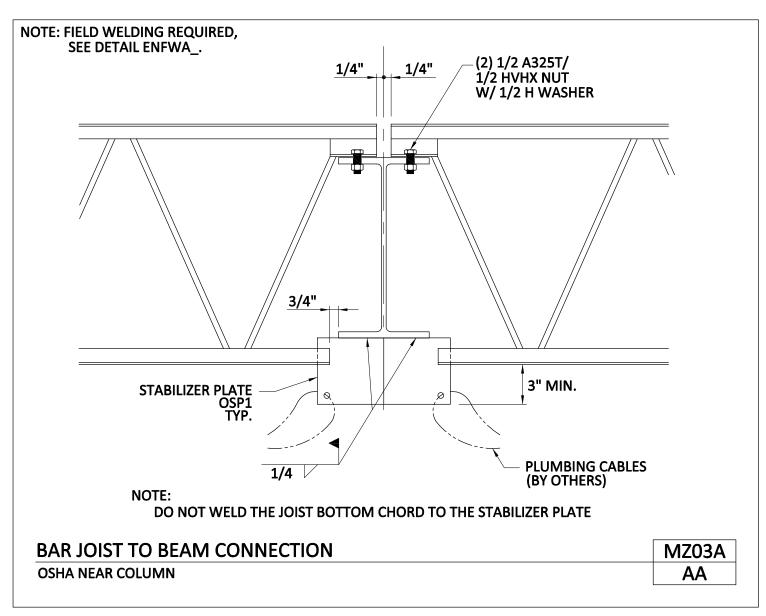


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bar Joist to Beam at Column Location OSHA at Column MZ04/AA

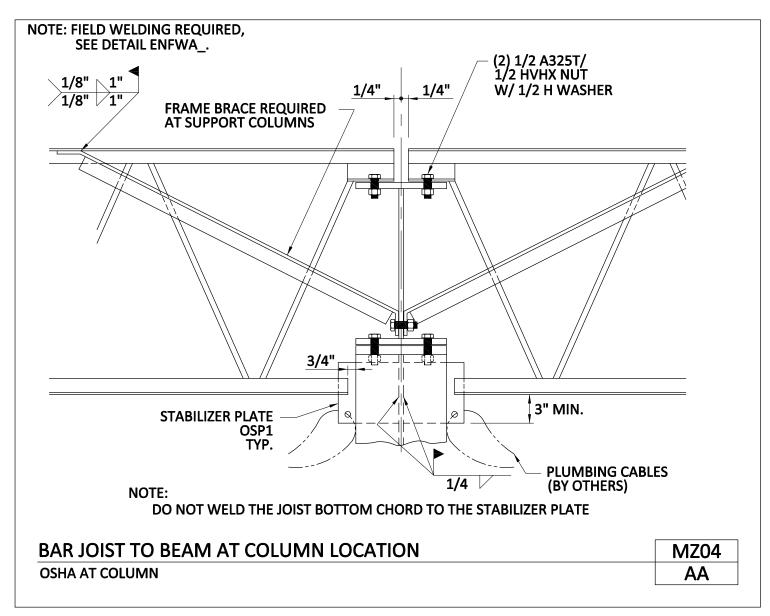


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bar Joist to Beam at Column Location OSHA at Column MZ04A/AA

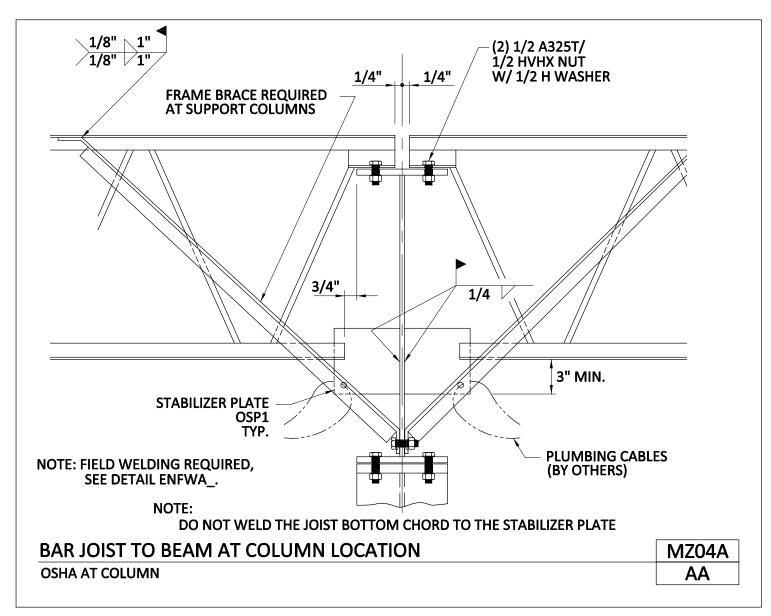


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Section at Deck Ends Pour Stops MZ07/AA

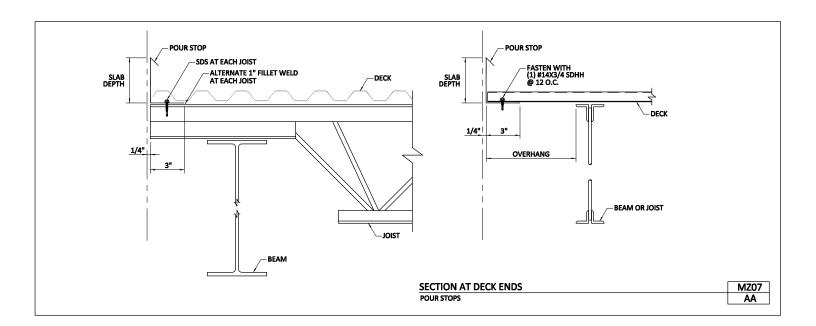

Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY


Pour Stop Detail at Full Height Column

MZ07B/AA

ERECTOR NOTE:

THIS DETAIL IS INTENDED TO SHOW YOU THAT POUR STOP MATERIAL HAS BEEN PROVIDED TO BE USED AROUND THE PERIMETER OF ANY MBS. COLUMNS THAT PENETRATE THROUGH THE MEZZANINE.

BECAUSE CONDITIONS VARY GREATLY, AN ATTACHMENT METHOD IS NOT SHOWN. THE ATTACHMENT IS NOT DESIGNED OR PROVIDED BY MBS.

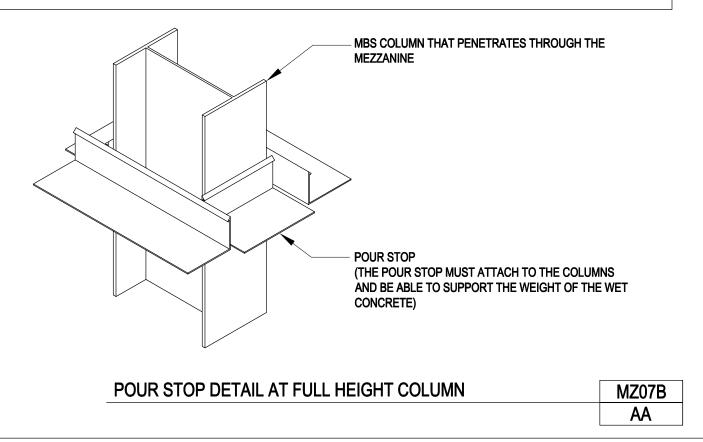


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Welded Horizontal Bridging Condition S Mezzanine MZ10/AA

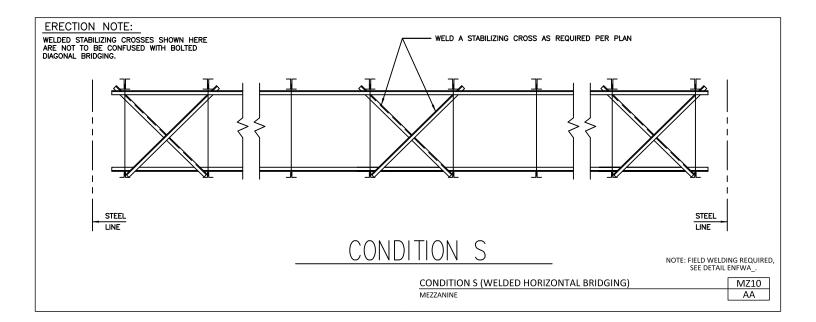


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bolted Diagonal Bridging Condition S Mezzanine MZ10A/AA

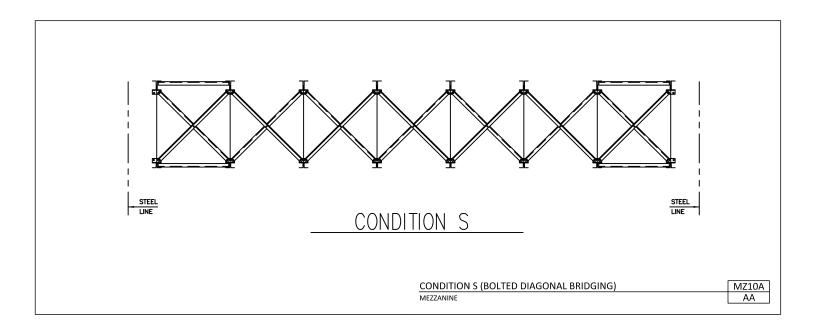


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bolted Horizontal Bridging Condition S Mezzanine MZ10B/AA

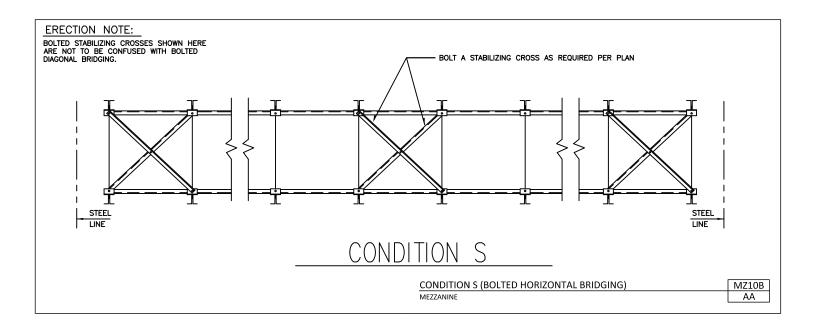


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Welded Horizontal Bridging Termination Condition N Mezzanine MZ11/AA

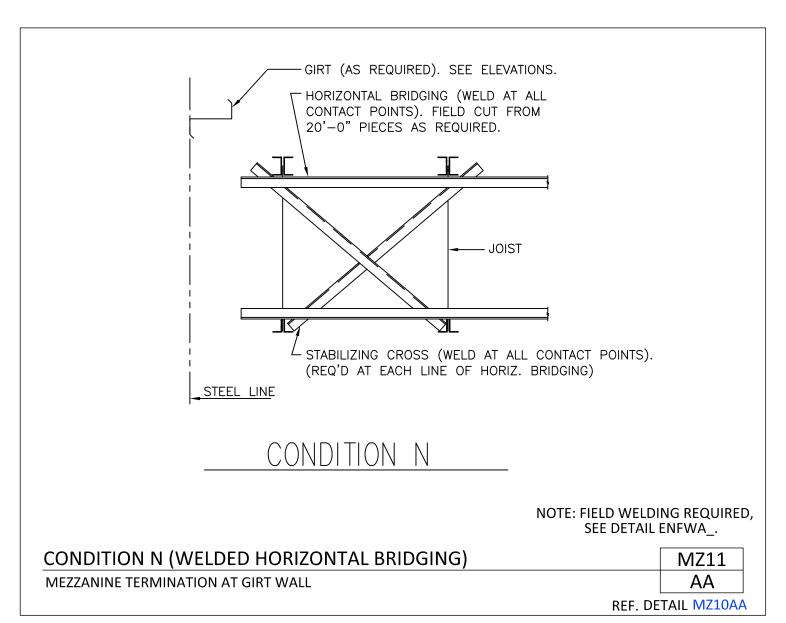


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bolted Diagonal Bridging Termination Condition N Mezzanine MZ11A/AA

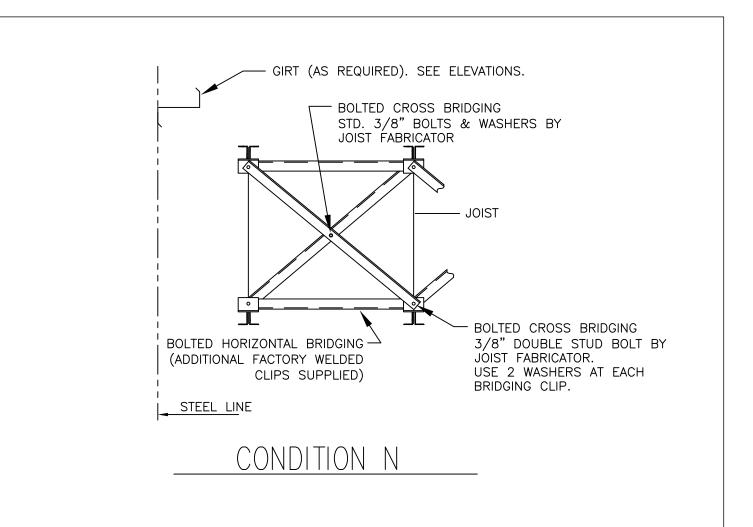

CONDITION N (BOLTED DIAGONAL BRIDGING)

MZ11A

MEZZANINE TERMINATION AT GIRT WALL

AA

REF. DETAIL MZ10AAA


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bolted Horizontal Bridging Termination Condition N Mezzanine MZ11B/AA

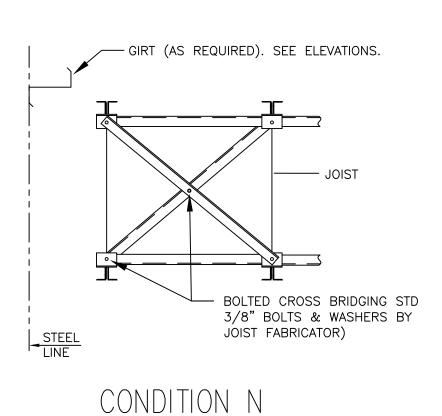

CONDITION N (BOLTED HORIZONTAL BRIDGING)

MEZZANINE TERMINATION AT GIRT WALL

MZ11B AA

REF. DETAIL MZ10BAA

Download the DWG file by clicking here.


AMERICAN BUILDINGS

PRODUCT MANUAL

BAR JOISTS

A NUCOR COMPANY

Welded Horizontal Bridging Termination at Wall System by Others Condition P Mezzanine MZ12/AA

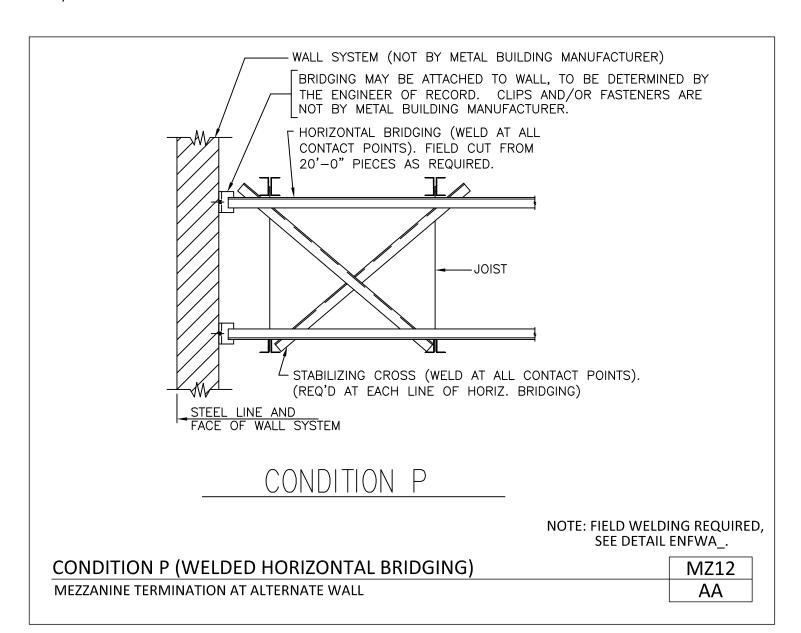

Download the DWG file by clicking here.


AMERICAN BUILDINGS

PRODUCT MANUAL

BAR JOISTS

A NUCOR COMPANY

Bolted Diagonal Bridging Termination at Wall System by Others Condition P Mezzanine MZ12A/AA

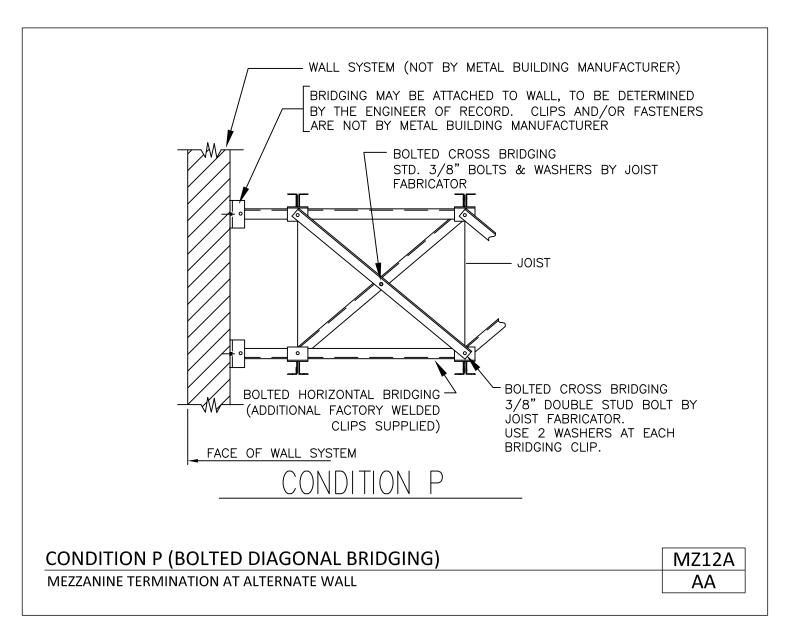

Download the DWG file by clicking here.

AMERICAN BUILDINGS

PRODUCT MANUAL


BAR JOISTS

MZ12B

AA

A NUCOR COMPANY

Bolted Horizontal Bridging Termination Condition P Mezzanine MZ12B/AA

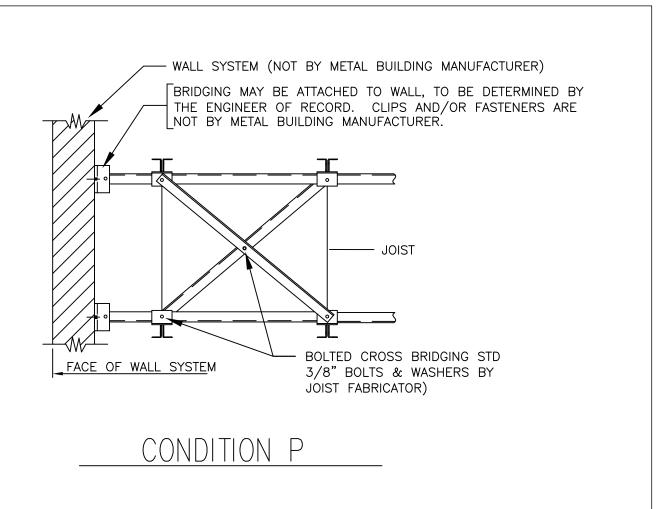

Download the DWG file by clicking here.

CONDITION P (BOLTED HORIZONTAL BRIDGING)


MEZZANINE TERMINATION AT ALTERNATE WALL



BAR JOISTS

A I I DE DR COMPANT

Welded Horizontal Bridging Termination Condition R Mezzanine MZ13/AA

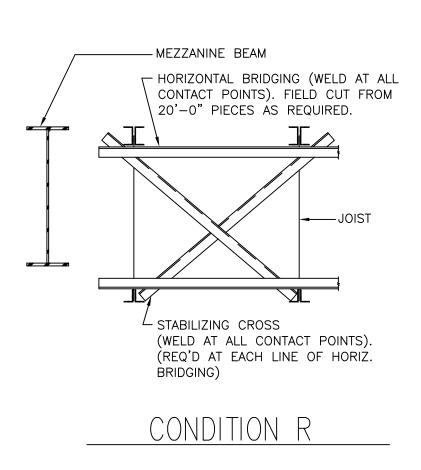

NOTE: FIELD WELDING REQUIRED, SEE DETAIL ENFWA_.

CONDITION R (WELDED HORIZONTAL BRIDGING)

MZ13

MEZZANINE TERMINATION AT MEZZANINE BEAM

AA


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bolted Diagonal Bridging Termination Condition R Mezzanine MZ13A/AA

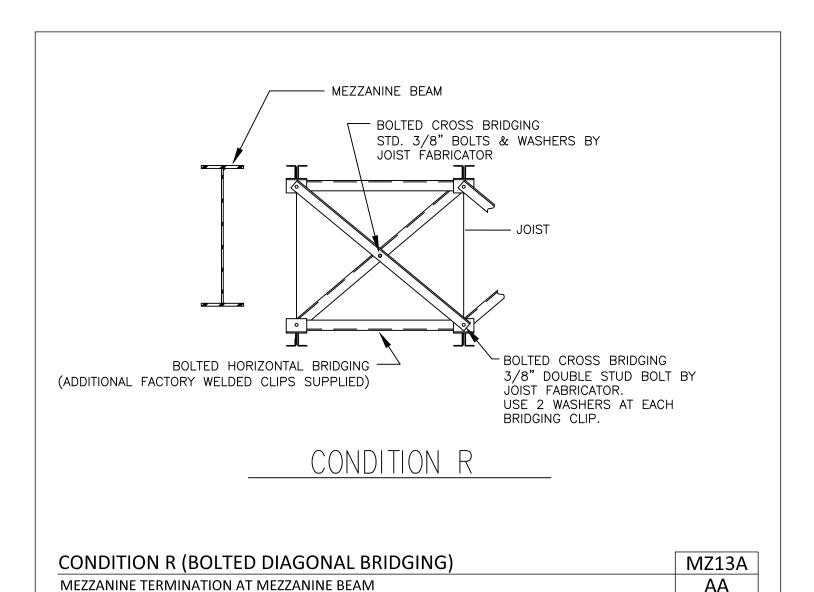


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Bolted Horizontal Bridging Termination Condition R Mezzanine MZ13B/AA

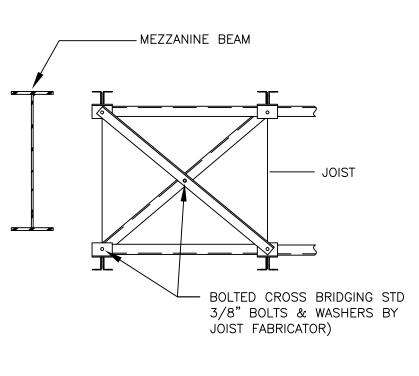

CONDITION R

CONDITION R (BOLTED HORIZONTAL BRIDGING)

MEZZANINE TERMINATION AT MEZZANINE BEAM

MZ13B

AA


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Joist Header Section Floor Joist MZ20/AA

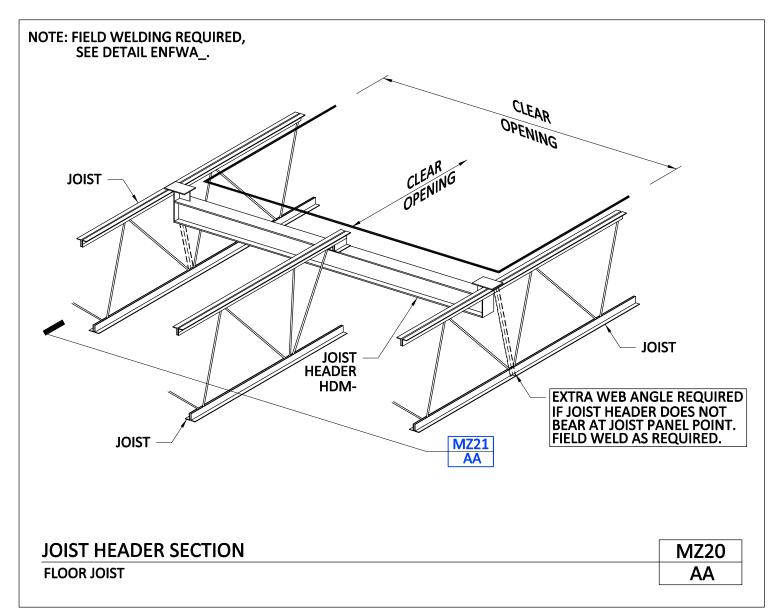


Download the DWG file by clicking here.



BAR JOISTS

A NUCOR COMPANY

Mezzanine Joist Header Section Floor Joist MZ21/AA

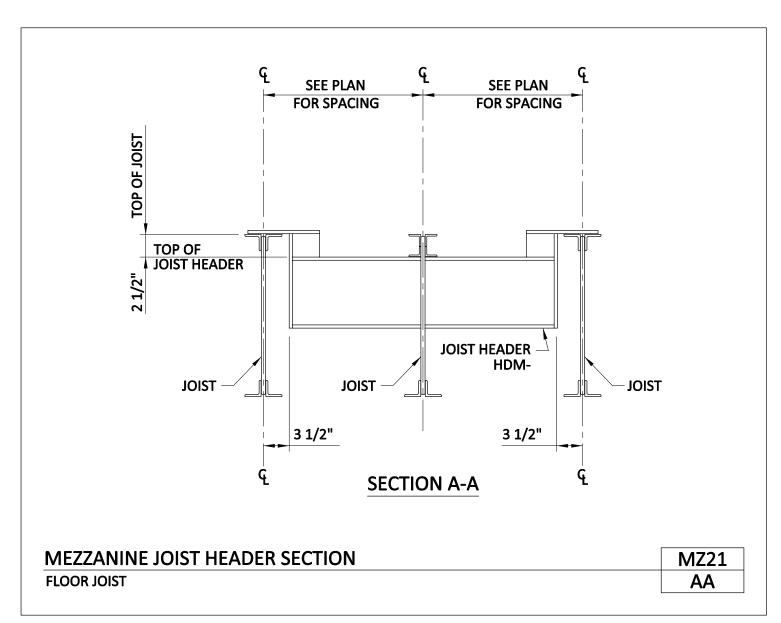


Download the DWG file by clicking here.



BAR JOISTS

Mezzanine Diagonal X Bridging Reference Layout

MZDB/AA

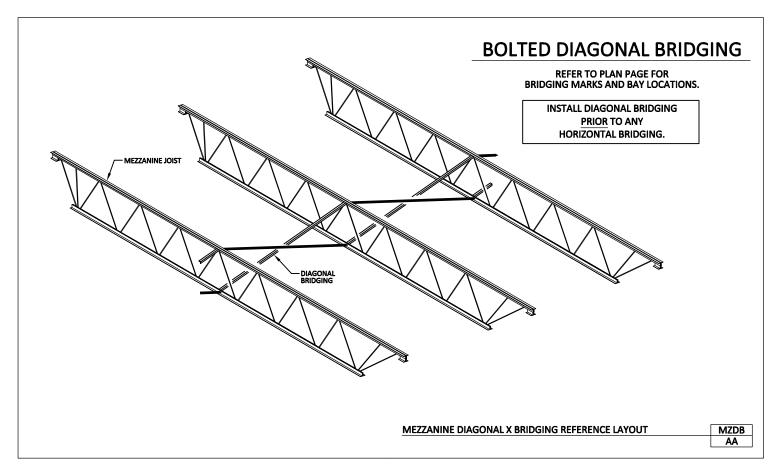


Download the DWG file by clicking here.



BAR JOISTS

Mezzanine Horizontal Bridging Refrence Layout

MZHB/AA

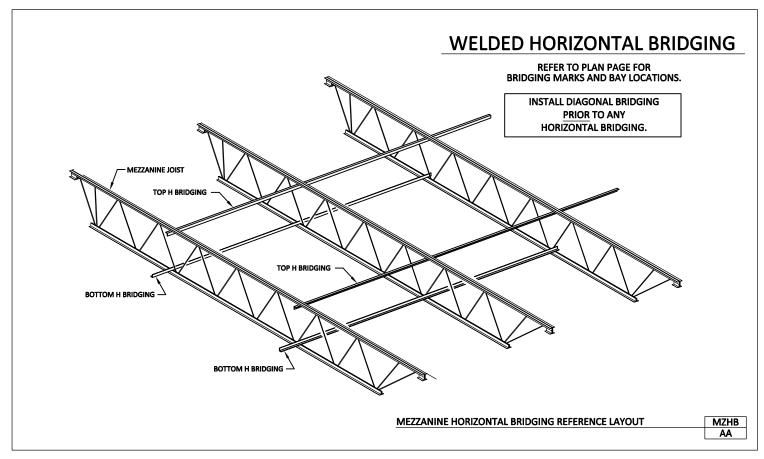

Download the DWG file by clicking here.




Bar Joists

A NUCOR COMPANY

Mezzanine Bridging Conditions

MZOHA/AA

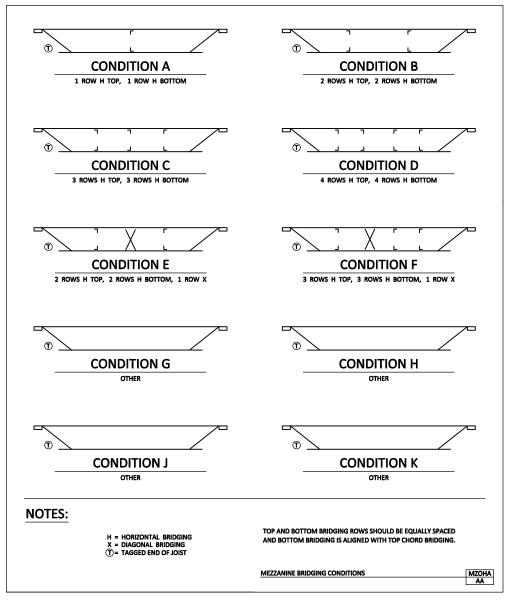

Download the DWG file by clicking here.