Product Manual - Expansion and Contraction Details

RC80/BA, Detail at Transverse Expansion Joint

RC80/GA, Detail at Transverse Expansion Joint

RC80/SA, Detail at Transverse Expansion Joint

RC81/BA, Longitudinal Expansion Joint in Roof

RC81/GA, Longitudinal Expansion Joint

RC81/SA, Longitudinal Expansion Joint

RC82/GA, Longitudinal Expansion Joint at Rake and Roof to Wall Transition

RC82/SA, Longitudinal Expansion Joint at Rake and Roof to Wall Transition

RF07/AA, Longitudinal Expansion Joint Framing

RF80/AA, Transverse Expansion Joint Framing Detail

WC80/AB, Transverse Expansion Joint Detail at Sidewall


WC80/AC, Transverse Expansion Joint Detail at Sidewall

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Detail at Transverse Expansion Joint Long Span III Roof Panels RC80/BA

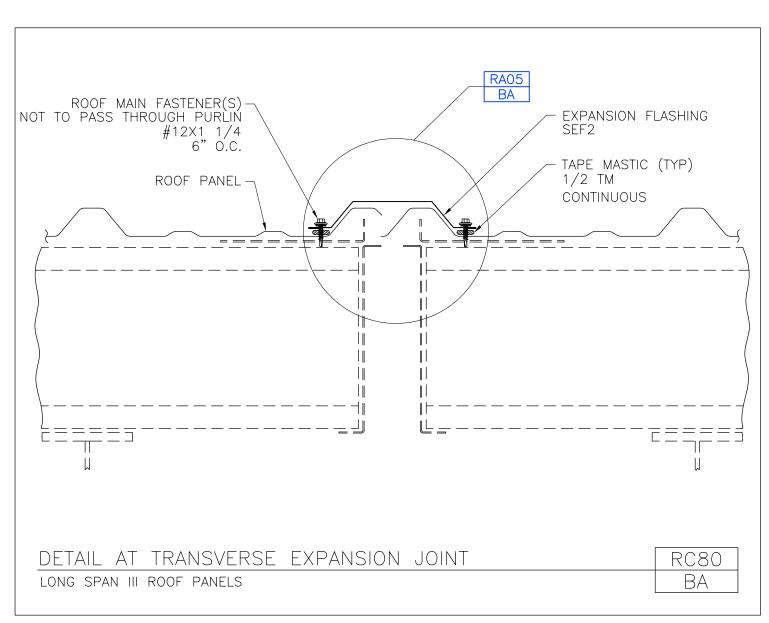


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Detail at Transverse Expansion Joint Loc Seam Roof Panels RC80/GA

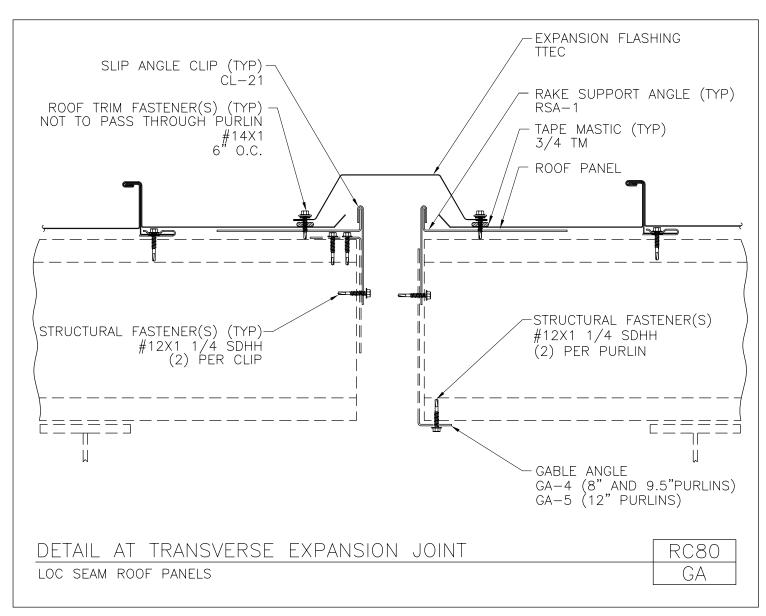


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Detail at Transverse Expansion Joint Standing Seam Roof Panels RC80/SA

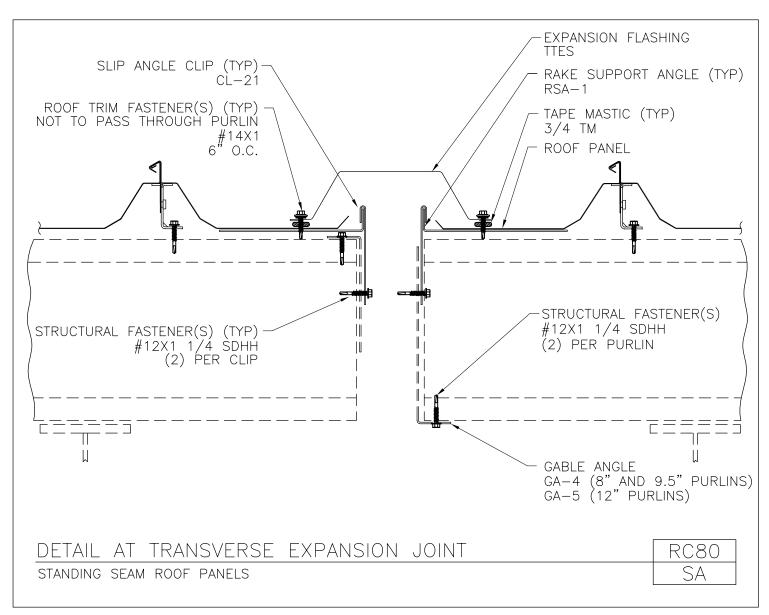


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Longitudinal Expansion Joint in Roof Long Span III Roof RC81/BA

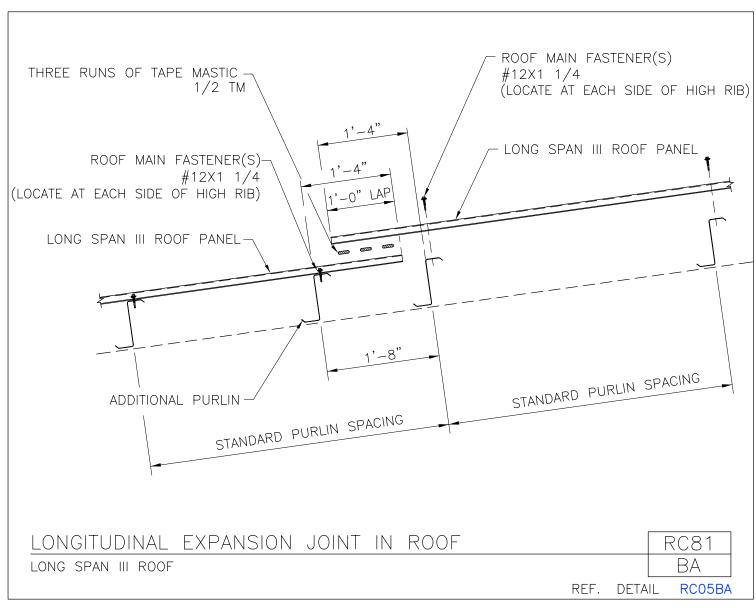


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Longitudinal Expansion Joint Loc Seam Roof Panel RC81/GA

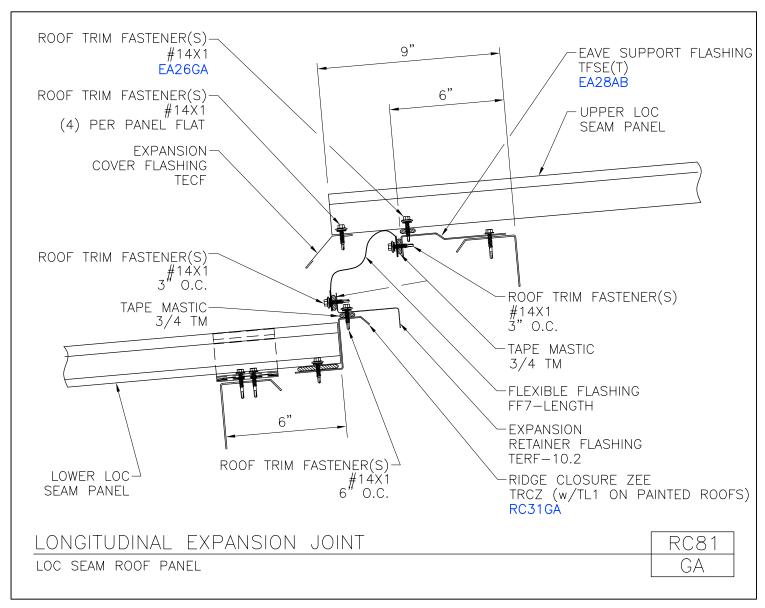


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Longitudinal Expansion Joint Standing Seam III/360 Roof Panel RC81/SA

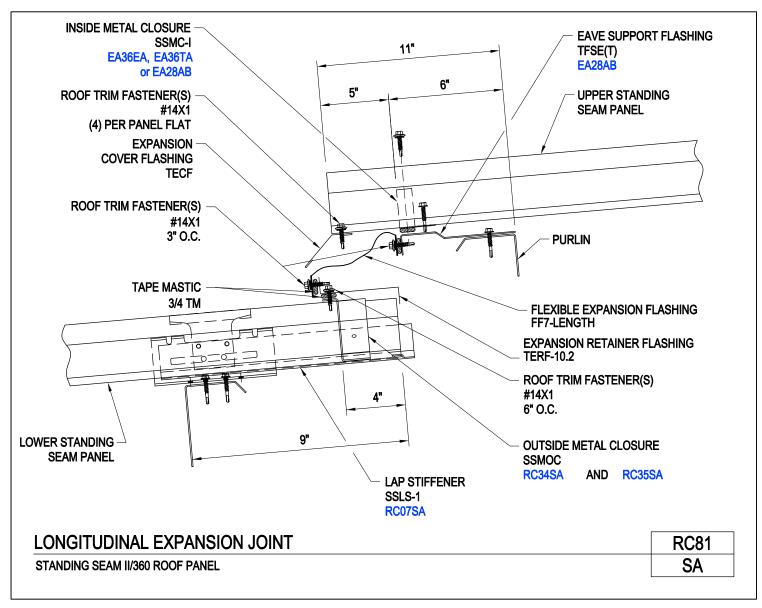

Download the DWG file by clicking here.




PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Longitudinal Expansion Joint at Rake and Roof to Wall Transition Loc Seam RC82/GA

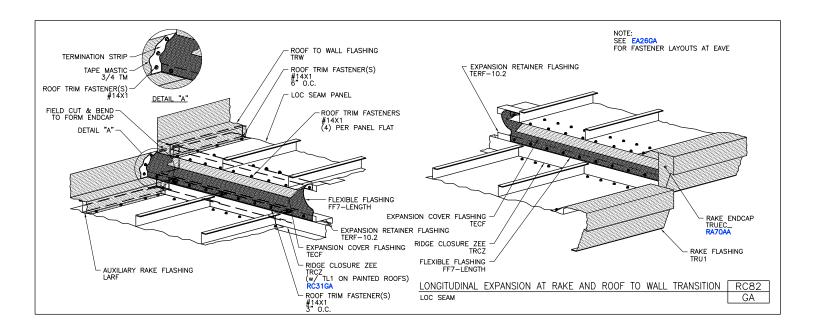

Download the DWG file by clicking here.




PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Longitudinal Expansion Joint at Rake and Roof to Wall Transition Standing Seam RC82/SA

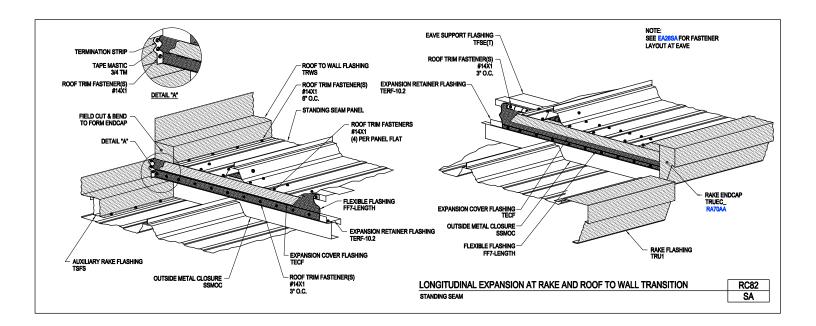


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Longitudinal Expansion Joint Framing Standing Seam & Loc Seam Roof Panels RF07/AA

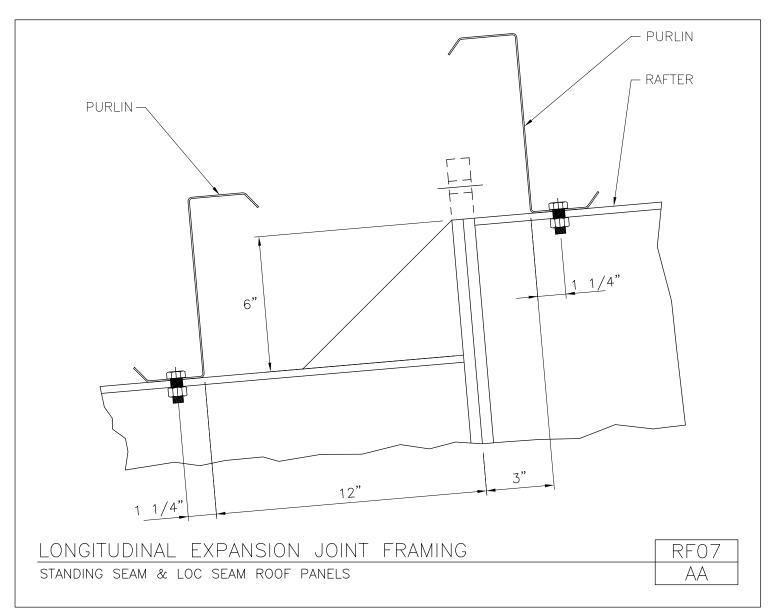


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Transverse Expansion Joint Framing Detail All Roof Panels RF80/AA

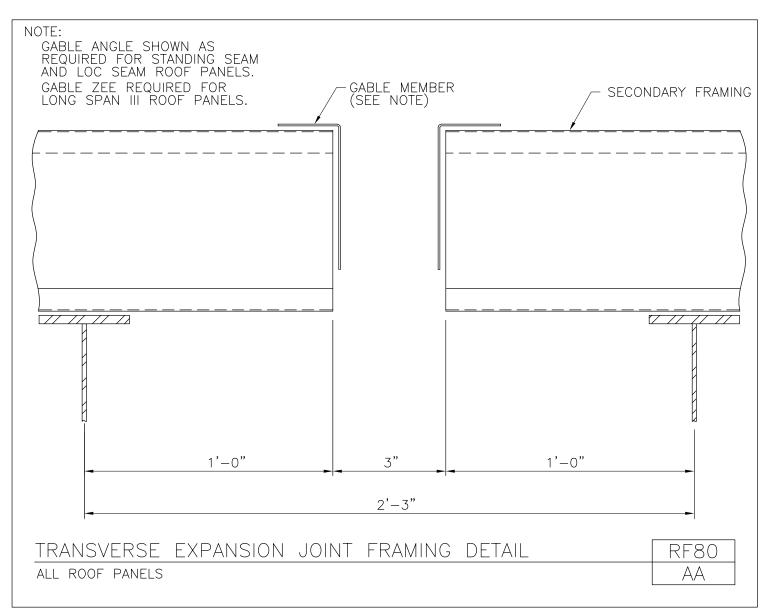


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Transverse Expansion Joint Detail at Sidewall Long Span III Wall Panels WC80/AB

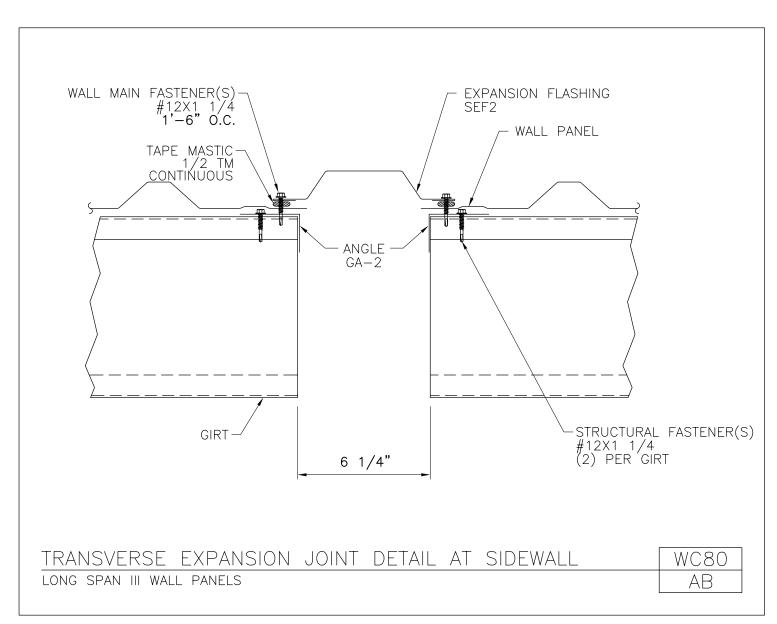


Download the DWG file by clicking here.

PRODUCT MANUAL

EXPANSION AND CONTRACTION DETAILS

A NUCOR COMPANY

Transverse Expansion Joint Detail at Sidewall Architectural III & Architectural "V" Rib Wall Panels WC80/AC

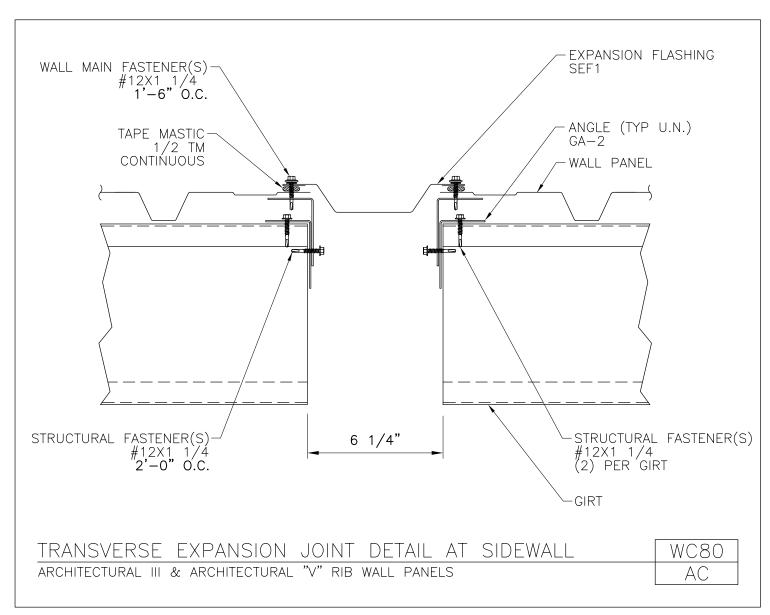

Download the DWG file by clicking here.