Product Manual - Standing Seam II - Roof Covering

RC01A/EA, Reinforcing Seam Clamp Installation

RC01/EA, Detail at Sidelap

RC02/SA, Reinforced Panel Clip Attachment Detail

RC03/SA, Panel to Clip Fastening Base Accessory Attachment

RC04A/EA, Reinforcing Seam Clamp Mid-Span of Purlins Detail

RC04/EA, Reinforcing Seam Clamp Detail

RC06/SA, Roof Panel Endlap

RC07/SA, Panel Lap Detail

RC17/EA, Typical Clip Attachment to Purlin

RC36/EA, Standing Seam II Seaming Applications

RC61/EA, Basic Parts and Pieces

RC62/EA, Standing Seam II Erection Tools

RC63/EA, Panel Marking and Notching

RC64/SA, Sequence of Roof Panel Erection

RC65/EA, Standing Seam II Duckbill Vise Grips

RC66/EA, Clamping Detail at Endlap

RC67/EA, Installation of Panel Clip

RC68/EA, Standing Seam II Seaming Machine

RC69/EA, Standing Seam Mirror


RC76/EA, Standing Seam II Deseamer



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Reinforcing Seam Clamp Installation Standing Seam II RC01A/EA

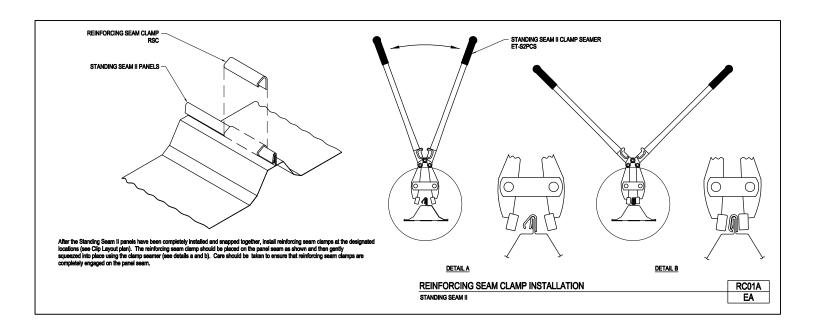


Download the DWG file by clicking here.



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Detail at Sidelap Standing Seam II RC01/EA

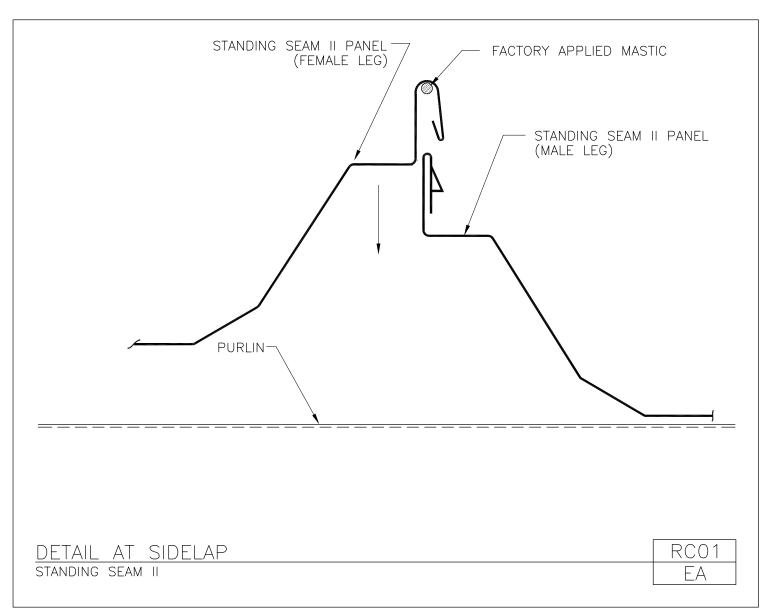


Download the DWG file by clicking here.

PRODUCT MANUAL

STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Reinforced Panel Clip Attachment Detail Standing Seam II RC02/SA

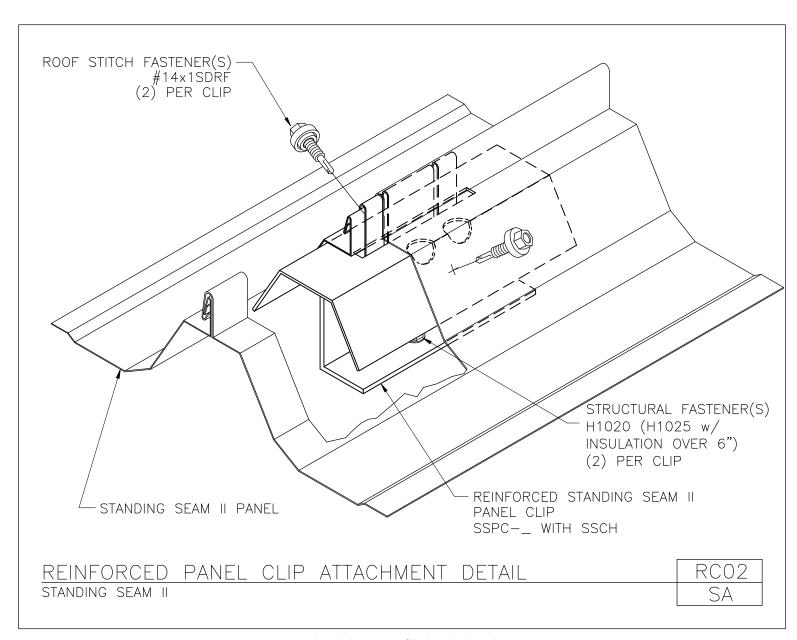

Download the DWG file by clicking here.

To Section Index


Revised: 03.31.21 (MR2021.04)

PRODUCT MANUAL

STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Panel to Clip Fastening Base Accessory Attachment Standing Seam II RC03/SA

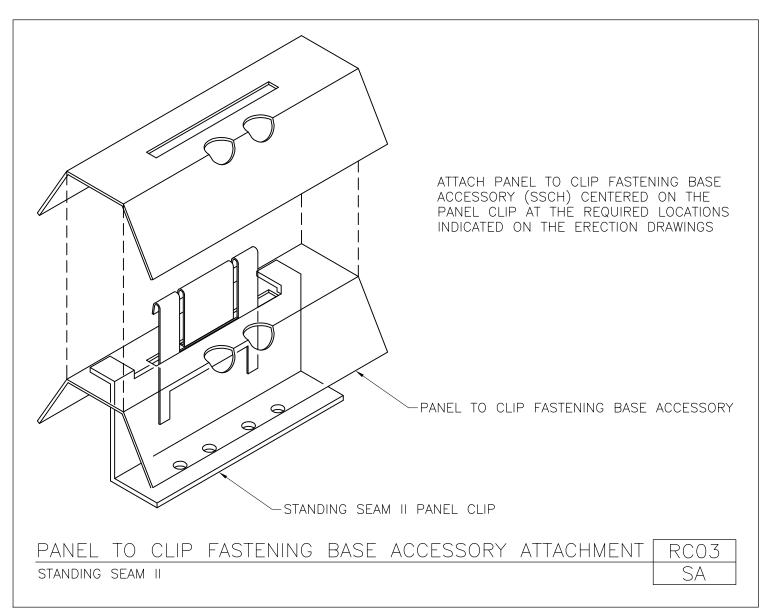


Download the DWG file by clicking here.



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Reinforcing Seam Clamp Mid-Span of Purlins Detail Standing Seam II Roof RC04A/EA

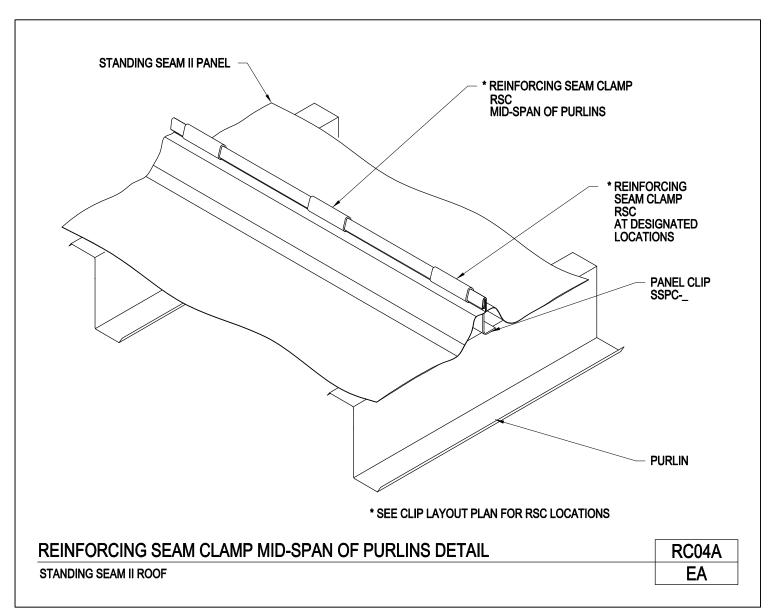


Download the DWG file by clicking here.



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Reinforcing Seam Clamp Detail Standing Seam II Roof RC04/EA

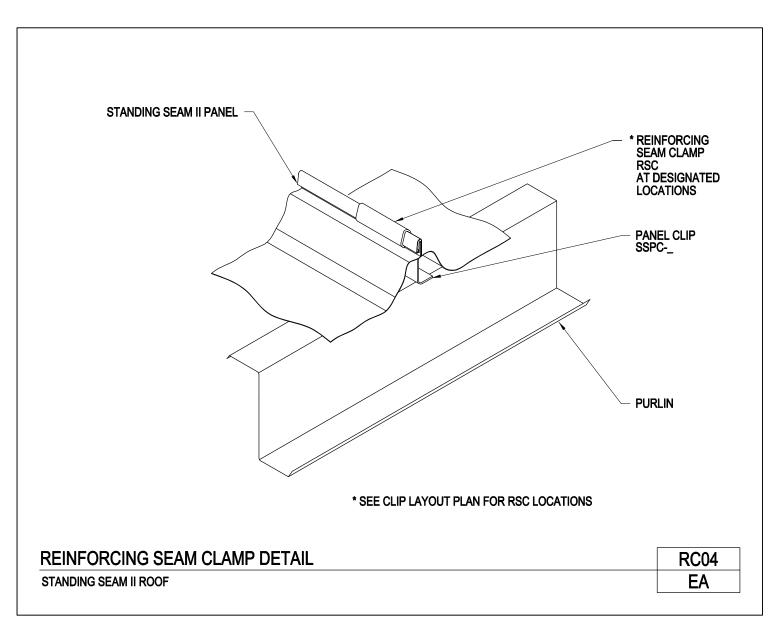


Download the DWG file by clicking here.

PRODUCT MANUAL

STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Roof Panel Endlap Standing Seam II RC06/SA

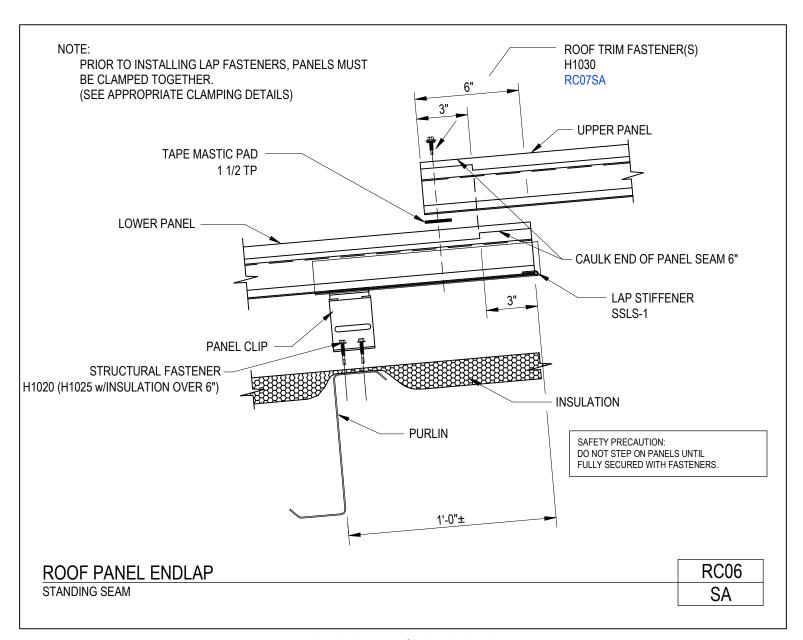

Download the DWG file by clicking here.


To Section Index



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Panel Lap Detail Standing Seam II RC07/SA

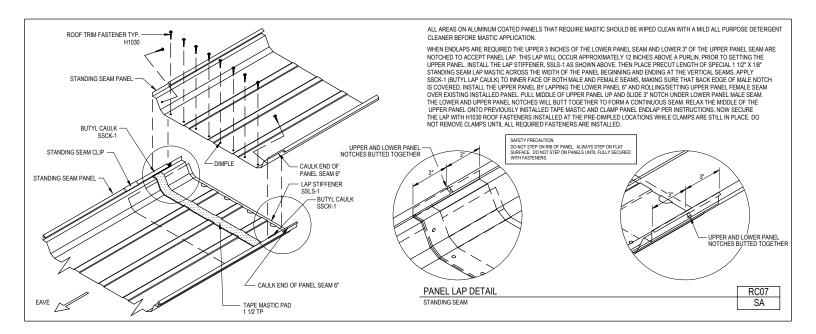

Download the DWG file by clicking here.


To Section Index

PRODUCT MANUAL

STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Typical Clip Attachment to Purlin Standing Seam II RC17/EA

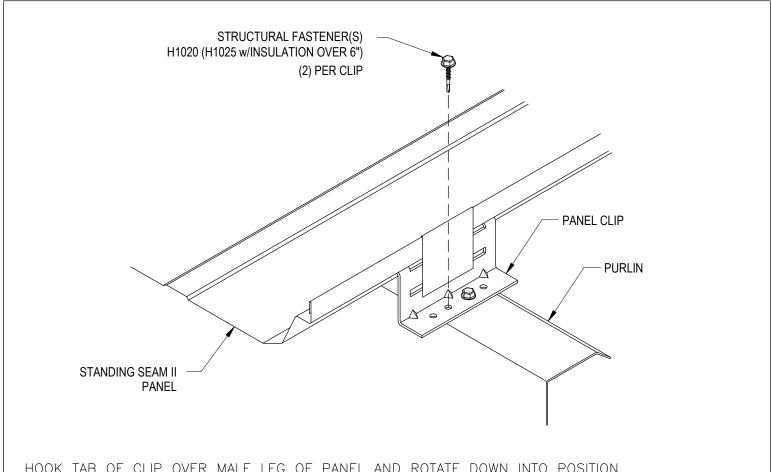

HOOK TAB OF CLIP OVER MALE LEG OF PANEL AND ROTATE DOWN INTO POSITION. SECURE THE CLIP TO THE PURLIN WITH (2) H1020, (H1025 w/INS. >6"), FASTENERS. A GAUGE SHOULD BE USED TO MAINTAIN PANEL MODULE.

TYPICAL CLIP ATTACHMENT TO PURLIN

STANDING SEAM II

RC17

EΑ

Download the DWG file by clicking here.

To Section Index




STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Standing Seam II Seaming Applications

RC36/EA

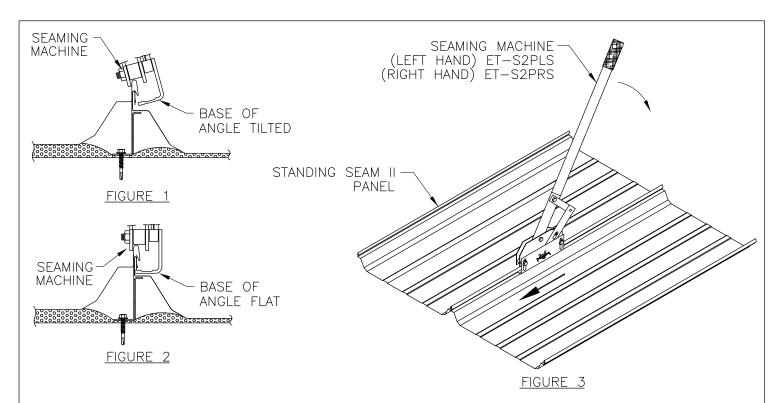

In preparation of the seaming operation, move the seam machine onto the unlocked seam by leaning the handle away from the operator as indicated in Figure 1. Rotate the seamer back into the working position on the seam as shown in Figure 2 with the lifting shoe under the bottom edge of the male seam.

Seam the two panels together by pushing down on the handle of the seaming machine until the panels are heard to snap. Move the machine forward approximately 8 to 12 inches and repeat the seaming procedure. Continue the procedure for the full length of the panel as shown in Figure 3.

STANDING SEAM II SEAMING APPLICATIONS

RC36 EA


Download the DWG file by clicking here.

PRODUCT MANUAL

STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Basic Parts and Pieces Standing Seam II RC61/EA

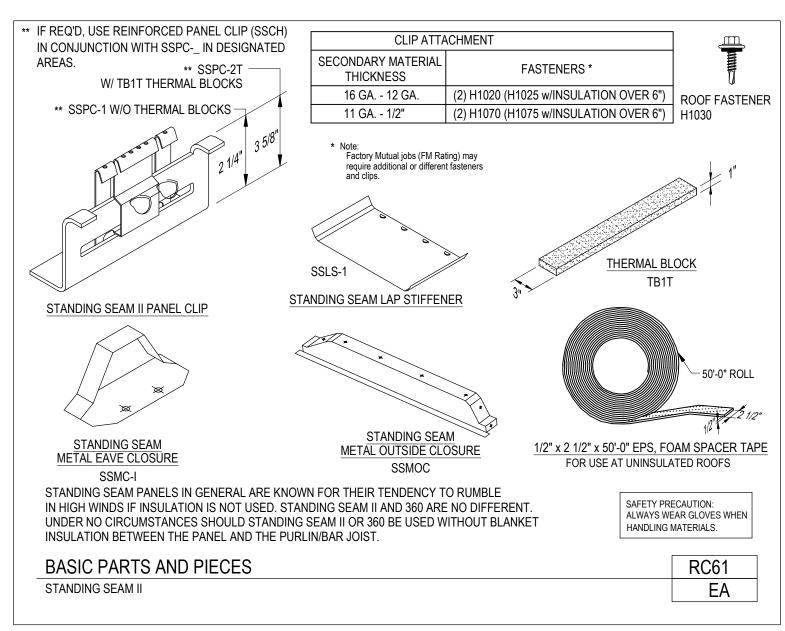

Download the DWG file by clicking here.

To Section Index



STANDING SEAM ROOF PANEL


A MUCOR COMPANY

Standing Seam II Erection Tools

RC62/EA

STANDING SEAM II PANEL ROOF SYSTEM HAS UNIQUE SIDELAP SEAMS WHICH ENGAGE THE ADJACENT PANEL TO FORM A TIGHT PENETRATION FREE CONNECTION. THE PANEL IS ATTACHED TO THE SUPPORT FRAMING BY A SPECIAL STANDING SEAM II PANEL CLIP WHICH IS INTERLOCKED WITHIN THE SEAM AND FASTENED TO THE PURLIN WITH SELF—DRILLING FASTENERS. THE PROPER INSTALLATION OF THE PANEL WILL REQUIRE TOOLS SPECIALLY DESIGNED FOR THIS PURPOSE.

ILLUSTRATED BELOW ARE THE TOOLS USED ON A STANDING SEAM II ROOF PANEL SYSTEM.

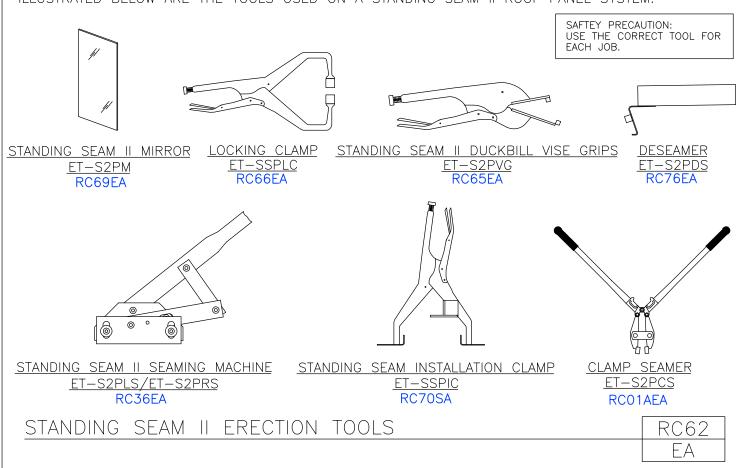


Download the DWG file by clicking here.



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Panel Marking and Notching Standing Seam II RC63/EA

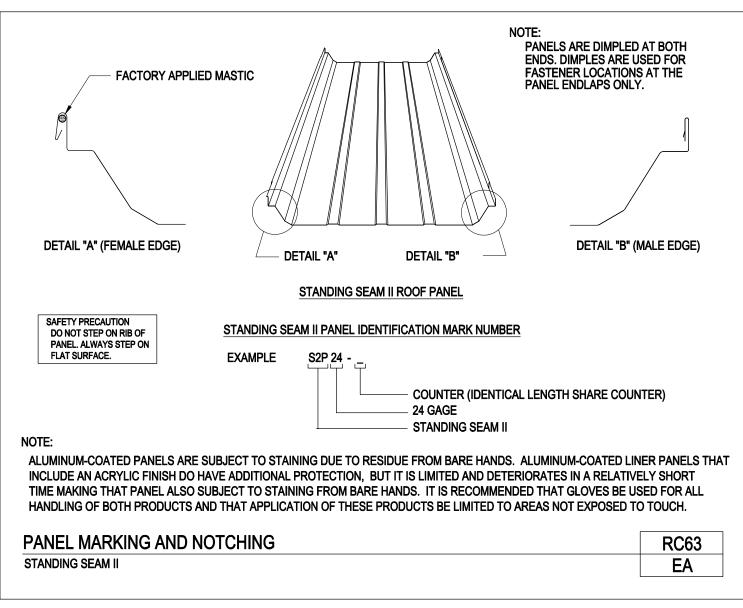


Download the DWG file by clicking here.



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Sequence of Roof Panel Erection Standing Seam II RC64/SA

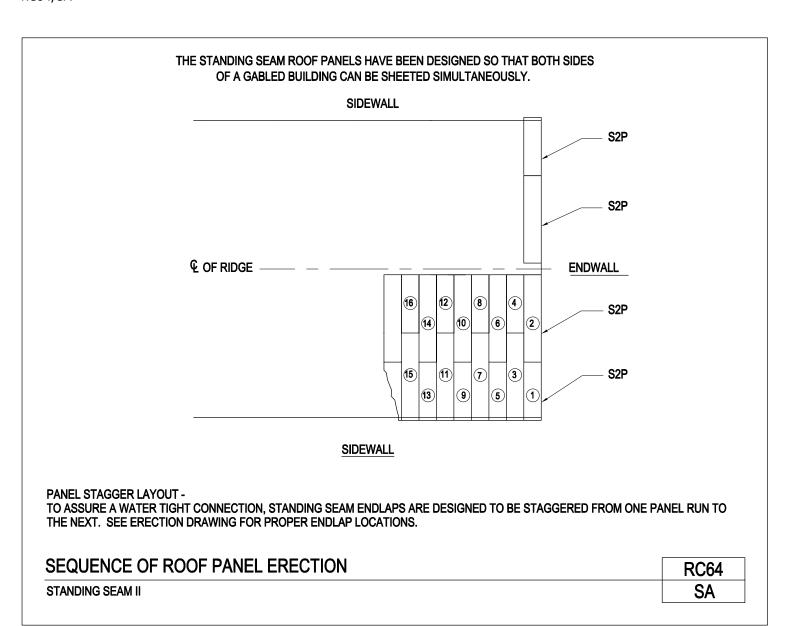

Download the DWG file by clicking here.




STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Standing Seam II Duckbill Vise Grips

RC65/EA

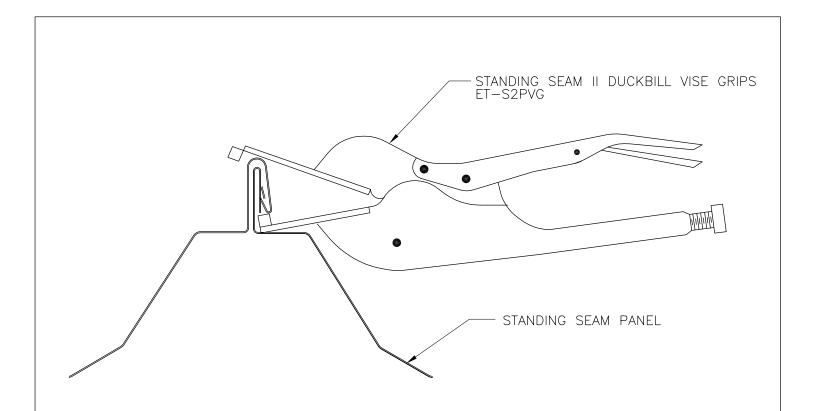

Position vise grips as shown and squeeze handles together to seam panel.

This tool may also be used at female leg at endlap during panel lap installation (position vise grips as shown before installing any fasteners).

STANDING SEAM II DUCKBILL VISE GRIPS

RC65 EA


Download the DWG file by clicking here.



STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Clamping Detail at Endlap Standing Seam II RC66/EA

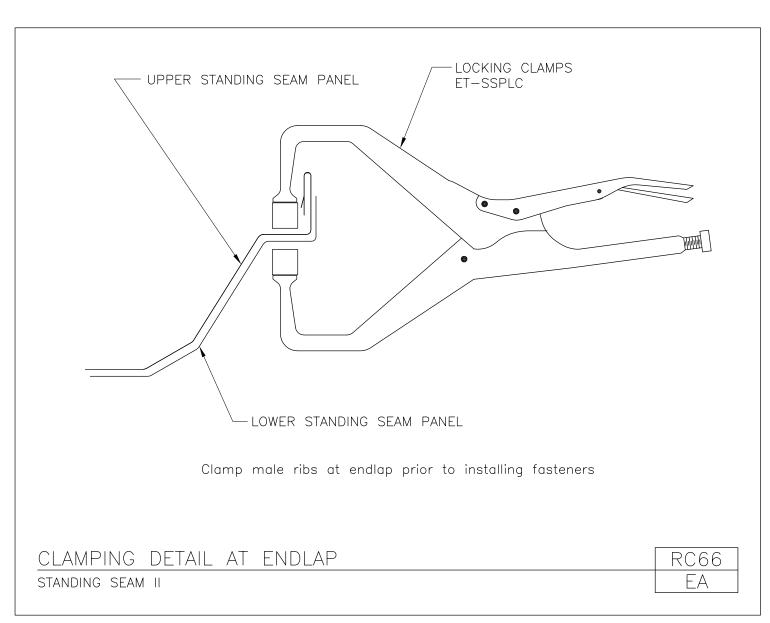

Download the DWG file by clicking here.


PRODUCT MANUAL

STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Installation of Panel Clip Standing Seam II RC67/EA

THE STANDING SEAM II PANEL CLIP HAS 0.125"Ø HOLES IN THE TAB TO ALLOW FACTORY APPLIED CAULK IN PANEL TO SEEP THROUGH FORMING A WEATHERTIGHT SEAL.

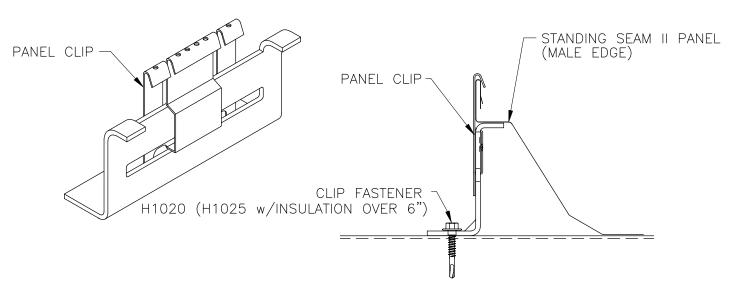

NOTE:

BE CERTAIN THE SLIDING PORTION OF THE CLIP IS CENTERED ON CLIP BASE.

THE CLIP IS THEN INSTALLED OVER THE LEADING OR MALE EDGE OF THE PRECEEDING PANEL. MAKE SURE THAT THE CLIP TAB IS IN POSITION TO SUPPORT THE RIB. SECURE THE CLIP TO THE PURLIN WITH TWO STANDING SEAM CLIP FASTENERS.

INSTALLATION OF PANEL CLIP

STANDING SEAM II

RC67 EA

Download the DWG file by clicking here.

To Section Index




STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Standing Seam II Seaming Machine

RC68/EA

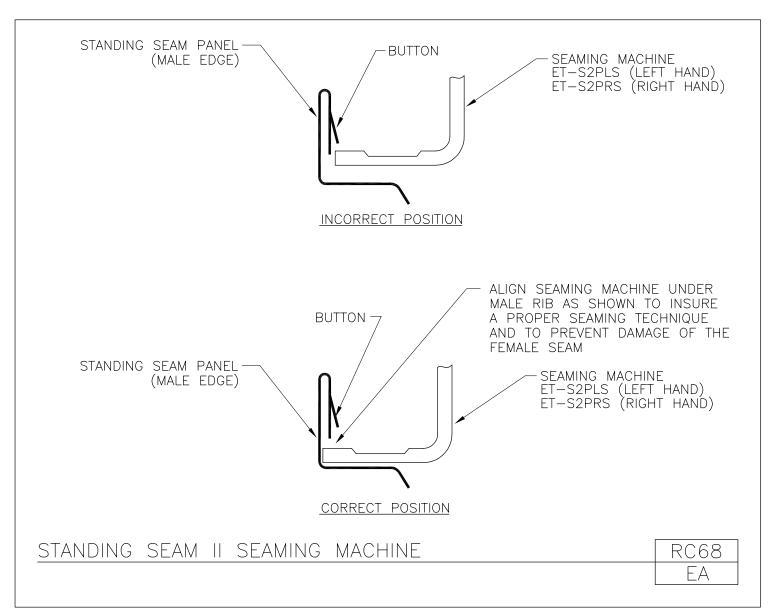

Download the DWG file by clicking here.




STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Standing Seam Mirror

RC69/EA

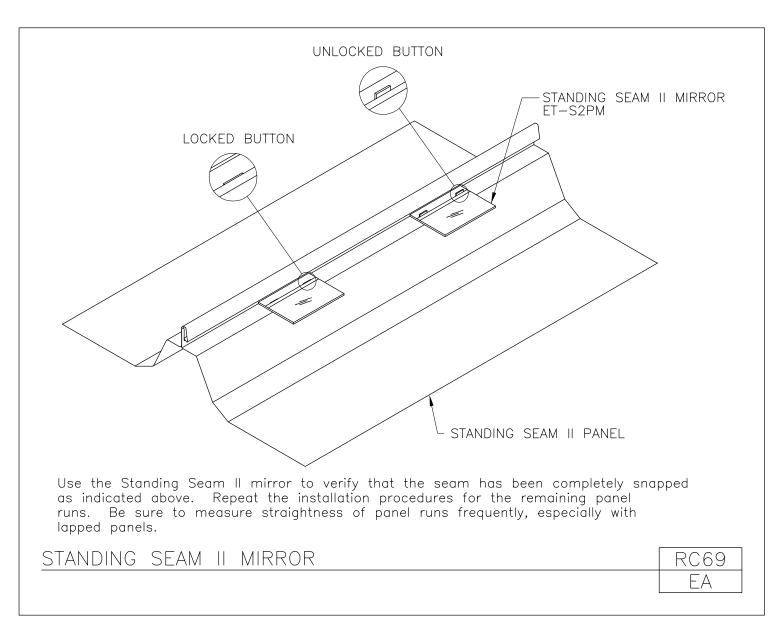

Download the DWG file by clicking here.




STANDING SEAM ROOF PANEL

A NUCOR COMPANY

Standing Seam II Deseamer

RC76/EA

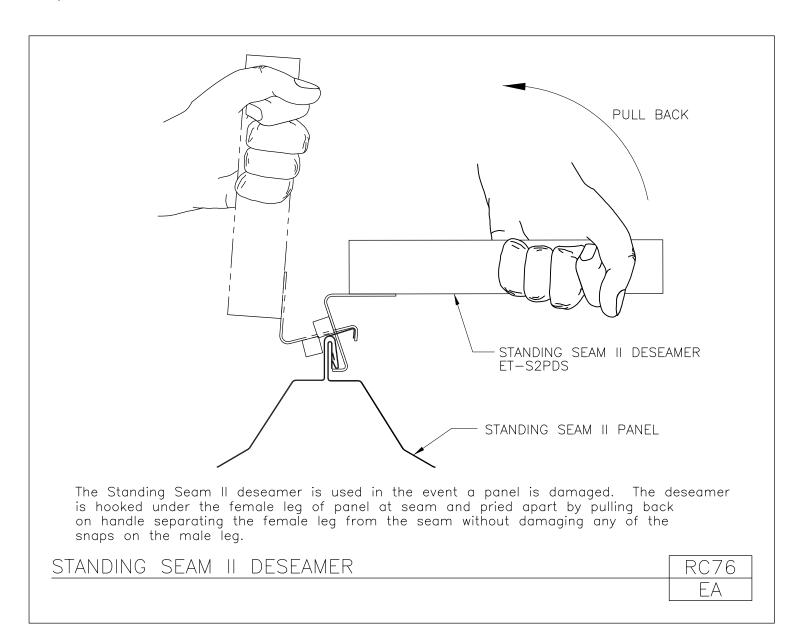

Download the DWG file by clicking here.